

Assembly instruction

SOLARCONNECT II

DN 16 / 20 / 25

Cut the corrugated hose with a cutter.



Plug-in the hose to the metallic stop.



Tighten the nut with a wrench.




Done.




- metal-to-metal sealing
- high temperature rating
- plug-in, tighten the nut, job done
- no special tool needed
- quick assembly on site

Product range


Compression fitting

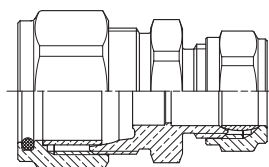


Pipe socket OD 22 mm

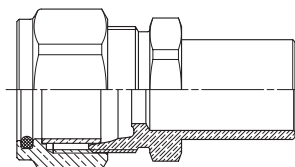

Male thread

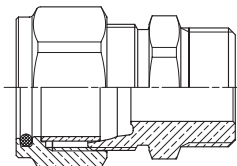

Female thread

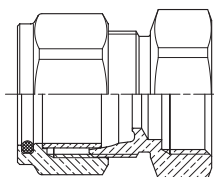

Coupling

